1080P High Definition
3.5” HDD Network Multimedia Player

M7

User Manual

www.eaget.cz

1. Introduction of Product
1.1 Preface

The M7 is an innovative digital media player which supports 1080P movie. You can now enjoy various multimedia files such as high definition movies, digital photos and music by different kinds of output sources from the player.

The player supports high definition movie, up to 1080P. HDMI, YPbPr, SPDIF and composite audio/video output ports which provide you with the most useful connections to TV, projector, audio system, etc. Unlimited extensibility by portable devices, memory cards, flash drives, etc.

User friendly UI and easy to operate. All functions/settings are accessible by remote controller. File filter function enables player to sort photos, music and movies into different folders for easy playing.

M7 is all metal enclosure, solid protection and more stable performance in high-temperature environment. It supports built-in 3.5" SATA hard drive up to 2TB capacity. Beautiful and simple industrial design, a perfect match of home theater!

The main functions of this product include:

Movie Playback	It supports 1080P (full HD), hi-fi output and AVI (MPEG-4 ASP: XviD), MPG (MPEG-2/1), RM/RMVB, VOB (DVD), IFO (DVD), DAT (VCD) ,MPEG-2 TS and MKV.H.264.formats
Music Playback	It supports MP3 / MP2 / WMA / AAC / FLAC / WAV / OGG Vorbis / PCM / LPCM / MS-ADPCM / LC-AAC / HE-AAC / COOK / RA-Lossless formats
Picture Playback	It supports JPEG, HD JPEG / BMP / GIF / TIF / PNG formats
Data Duplication	It supports duplication of data among the movable hard disk, memory card, USB flash drive and so on.
Network function	It supports wired and wireless Internet, supports UPnP media server. (wireless functions are available by the optional USB wireless adapter)
Download function	It supports BT Downloading;
Hard Disk Storage	Supports built-in 3.5" SATA hard drive(up to 2TB capacity)
HDMI Output	It supports HDMI output up to 1080p(Full HD);
SPDIF DTS Track	It supports optical / coaxial digital audio output; It supports DTS hi-fi player with surrounding and 5.1 stereo sound effect.

Remarks:
The company has the right to modify the machine specifications and designs without any notification and all the upgrade(s) can be done through internet assessment from the company upgrade package from time to time.

1.2 Packing List

EAGET M7 Player	1 Piece
Power Adapter	1 Piece
Remote Control	1 Piece
AA Battery	2 Pieces
AV Cable	1 Piece
USB Data Cable(A to Mini B)	1 Piece
HDMI Cable	1 Piece (optional)
User Manual	1 Piece

Note: The actual contents in the package might be different from the packing list in this manual, if any difference, please check with the vendor.

1.3 Precautions of Use

We have well considered the personal safety issues upon designing and manufacturing and please read the following information carefully before start using it due to the safety and effective use of this product.

1.3.1 Precautions

Users can not make any changes to this product. If it is using for the commercial hard disk, please use this player at the temperature range within -5^0C to $+40^0$C.

1.3.2 Use of Power Supply

* Operating voltage of this product: 12V

* Connect the power adapter or power cable to the corresponding main socket on this product before use.

* Make sure the power cable is located safely and free from any possibility of damage or pressure to prolong the service life of the adaptor or the power cable.

* In order to minimize the danger of electric shock, please unplug the power supply from the socket before cleaning it.

* Never use the power adapter or power cable to connect with this product in moisture and dusty conditions.

* Never change the power cable and plugs for the power adapter or for the power supply.

1.3.3 Radio Interference

If not properly shielded, almost all electronic devices will get radio interference. Under some conditions, your player might get interference.

The design of this player has followed the FCC/CE standard, and has followed the following rules:

(1) This player may not cause harmful interference;

(2) This player could accept some interference received including interference that may cause undesired operation.

1.3.4 Maintenance

In case of any faults with this product, please go to the appointed maintenance points for maintenance services by our trained technicians. Never disassemble this product by yourself to prevent from further damaging of the product or lead to self endanger.

1.3.5 Disposing of the Player

When you dispose of the player, be sure to dispose it appropriately. Some countries may

regulate disposal of electrical device, please consult with your local authority.

1.3.6 Hard Disk Cautions

The player uses an internal hard disk for data storage.

Physical impact may create bad sector in the hard disk, you can use CHKDSK to fix the problem.

All data stored in the player may be lost due to physical impact, electrical shock, power lost, HDD format etc. Please backup your data.

It is suggested to do defrayment after a long period of usage.

Regularly backup the data in the hard disk so that it can be recovered in the event of data corruption or loss. Our company takes no responsibility for loss of data stored on the hard disk.

1.3.7 Others

1. During the use of this product, avoid contacting this product with water or other chemical reagents. In case of engaging for carelessness, please absorb the liquid with dry cloth immediately.

2. All electronics device are very sensitive and may be brittle, never vibrate or impact this product violently during use, nor apply too much force on pressing the keys on this product.

- Do not let the player contacting with water or other liquid.
- Never disassemble, repair or refit this player by yourself. Any damage done will not be included in the repair range.
- Do not press the buttons with too much force.
- Avoid hitting the player with hard object, avoid shaking, and keep away from magnetic fields.
- During in static and the strong electromagnetic magnetic field, the product will be fail to function, then unplug the power cable and then plug the power cable again, the product will return to normal performance.

2 Connection Instruction

2.1 Connecting the Power Supply

(1) Follow the picture and connect the AC adaptor to the player's DC IN jack;
(2) Follow the picture and plug in the AC adaptor to the power outlet.

2.2 HDMI OUT

(1) Follow the picture and plug one connector on your HDMI cable to the player's HDMI jack;
(2) Follow the picture and plug the other connector on your HDMI cable to the TV's HDMI jack.

2.3 A/V OUT

(1) Follow the picture and plug in the 3 color connector to the player's A/V OUT jack;
(2) Follow the picture and plug in the 3 color connector to the TV's A/V IN jack.

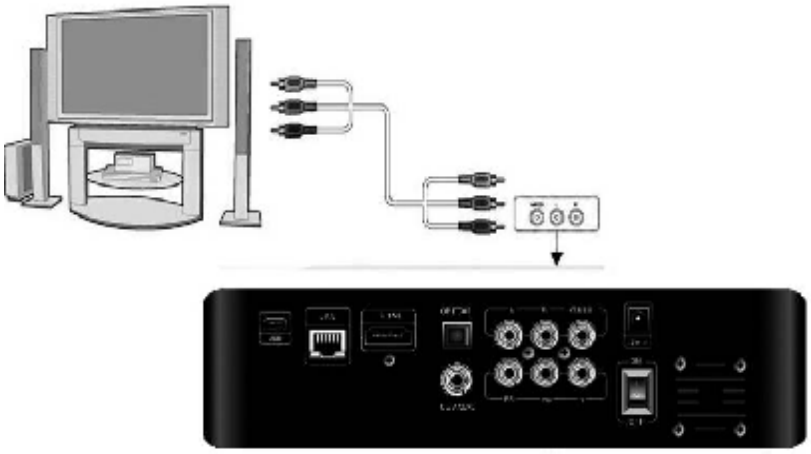

2.4 Y/Pb/Pr Component OUT

(1) Follow the picture and plug in the 3 color connector to the player's Y/Pb/Pr jack;
(2) Follow the picture and plug in the 3 color connector to the TV's Y/Pb/Pr jack.

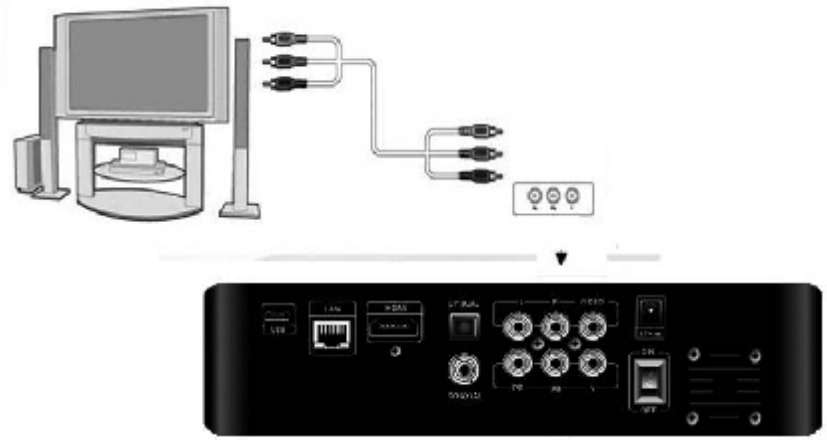

Audio Connection while using Y/Pb/Pr Video out:
First method: use the audio output from the A/V OUT jack;
Second method: use the audio output from the S/PDIF Coaxial or Optical fiber jack.

2.5 Connecting to an Digital Amplifier

(1) Follow the picture and plug one end of coaxial/ Optical fiber cable to the coaxial/ Optical fiber output port of this product.

(2) Follow the picture and plug the other end of coaxial/ Optical fiber cable to the coaxial/ Optical fiber input port of corresponding power amplifier.

Note: Optical fiber and coaxial cable are not supplied.

(coaxial)

(Optical fiber)

2.6 Connecting to a LAN

To connect to a LAN (Local Area Network) you require a router or switch (not supplied).
(1) Connect one of the crystal plugs on the cable to the player's LAN socket;
(2) Connect the other crystal plug on the cable to LAN port on your router, switch, or hub devices.

2.7 Connecting to a WLAN

(1) Make sure the player is powered on;
(2) Plug the Wireless LAN USB Adapter (i.e. Wi-Fi USB Dongle) to the USB HOST port of the player.

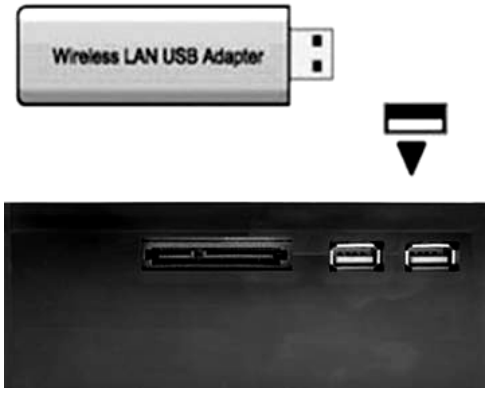

Helpful tips: The Wi-Fi Dongle is an optional accessory sold separately and not all wireless Network cards sold on the market can be used for this player. Please consult with the sales when you wish to make the best use of this product.

2.8 Connecting a USB Device

(Include: U-Disk, removable HDD, USB DVD ROM ect.)
(1) Make sure the player is powered on;
(2) Plug in the USB stick or USB HDD etc. to the USB HOST port of this player.

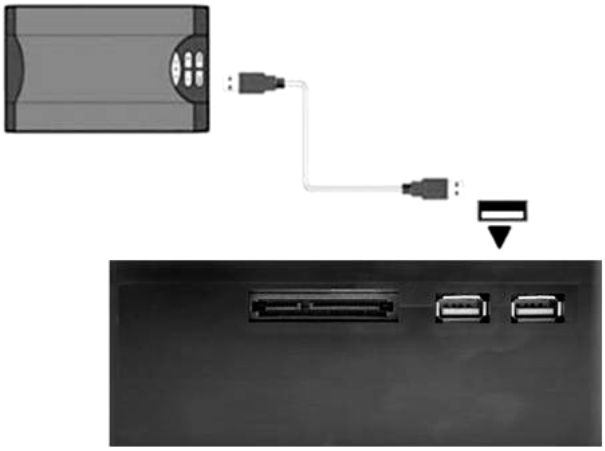

2.9 Connecting SATA HDD

(1) Follow the picture and plug on end of the SATA cable to the player's SATA jack;
(2) Follow the picture and plug another end to the SATA HDD.
Then you can through Brower-HDD to browse.

2.10 Connecting to a PC

(1) Make sure the player is powered on;
(2) Plug in the squares connector of the USB cable to this player's USB DEVICE port;
(3) Plug in the rectangular connector of the USB cable to computer.

Help tips:
1. Open “My Computer” and a new disk symbol will appear and In this way, you can manage the content on the built-in HDD of the player on your local PC.
2. Please refer to the computer instructions to format the hard disk. (It’s not recommended the user to use other software to partition the hard disk of this player).

3. About the Player

3.1 Remote Control

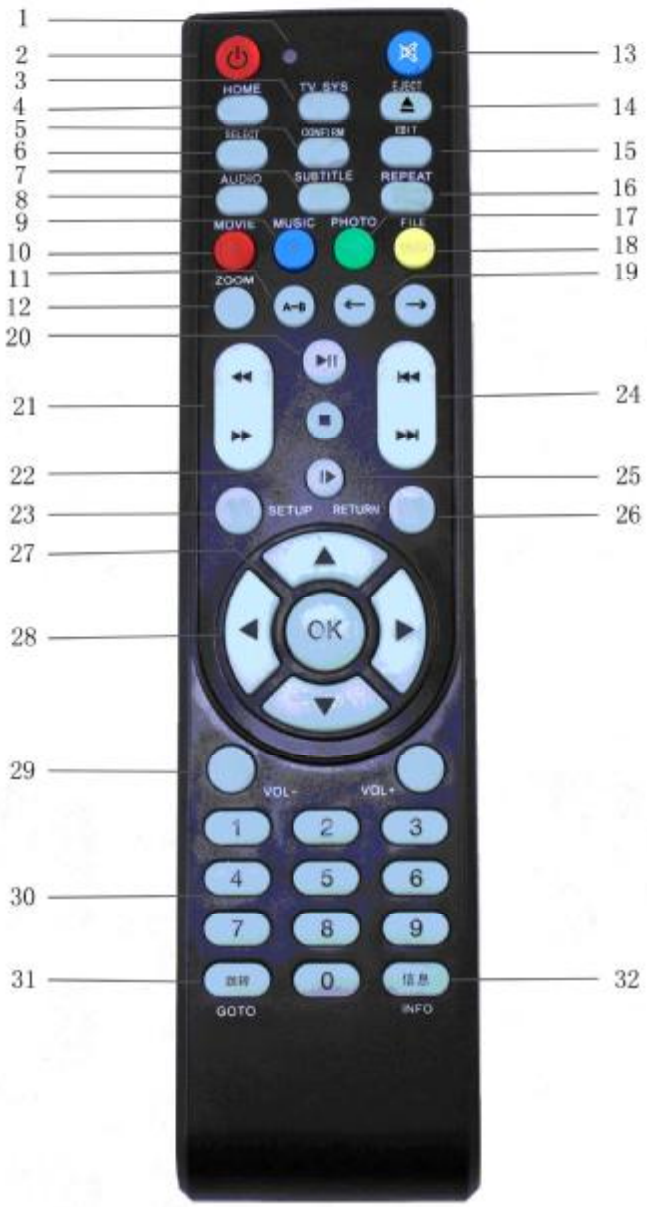

1.Remote Indicator	**2.Stand by**
3.TV System	**4.Home**
5.Confirm	**6.Select**
7.Subtitle	**8.Audio**
9.Music	**10.Movie**
11.A-B	**12.Zoom**
13.Mute	**14.Eject**
15.Edit	**16.Repeat**
17.Photo	**18.File**
19.Step	**20.Play/Pause**
21.FR/FF	**22.Stop**
23.Setup	**24.Previous/Next**
25.Slow	**26.Return**
27.OK	**28.Navigation keys**
29.Vol+/-	**30.Numeral Keys**
31.Goto	**32.Info**

Remote Control Description:

NO.	Item	FUNCTION
1	**Remote Indicator**	Remote indicator.
2	**Stand by**	Press to enter standby mode or wake up.
3	**TV System**	Switch the output mode into video signals.
4	**Home**	Return to the Main Interface.
5	**Confirm**	Press to confirm and add the selects to the play list.
6	**Select**	Press it in copy menu to select the file to be copied and in browse menu to select the file to be added into the Play List
7	**Subtitle**	Press to set subtitle options.
8	**Audio**	Press to select an audio track.
9	**Music**	Press it to rapidly enter into music applications.
10	**Movie**	Press it to rapidly enter into movie applications.
11	**A-B**	Press to select a starting point, repress to select an end point, and playback the selection continuously.
12	**Zoom**	Zoom in the image.
13	**Mute**	Turn on/off the sound.
14	**Eject**	Control the ejection of DVD floppy.
15	**Edit**	Press to enter into file edit menu.you can do rename and delete the files operations. When under the My Shortcuts interface,press to adjust the network edit menu.
16	**Repeat**	Press to set the repeat mode.
17	**Photo**	Press it to rapidly enter into photo applications.
18	**File**	Press it to rapidly enter into file copy applications.
19	**Step**	Press to goes forward or backward by certain time.
20	**Play/pause**	Pause/resart to play the file.
21	**FR/FF**	Press it in media play mode for FR/FF. Press Play to resume to the normal mode.
22	**Stop**	Press it to stop the media file being played at present.
23	**Setup**	Press it to rapidly enter into Setting Applications.
24	**Previous/ Next**	Press it during media file play for forward or backward for a file; Press to select the Previous/Next Chapter when playing the file has the chapters.
25	**Slow**	Press it to slow down the play state.Press Play key to return to normal play state.
26	**Return**	Return to the superior diretory and exit from play state.
27	**OK key**	Press to confirm current operation.
28	**Navigation keys**	Press the navigation keys to operate the menus on this interface. Press to adjust the sizes and vertical positions of plug in text subtitles; press to during picture play to move the viewing position after zooming in and out. Press left/right key to rotate the picture.
29	**Vol+/-**	Press to add or decrease the volume.
30	**Number keys**	Press to enter numeric input when changing settings. Select the chapter when playing the file has the chapters.
31	**Goto**	Press it during video play to select a time period to be played back.
32	**Info**	Press to hide or display the information bar during playback.

3.2 Front View

1. IR Receiver Window 2. Stand by Switch(indicator) 3. VFD Screen

Description:

No.	Item	Description
1	IR Receiver	Receive the signal from remote control.
2	VFD Screen	Display the playback status and progress and other information for the operation.
3	Stand by Switch& work indicator	Press the bottom to enter into standby mode; The LED indicator shows green when turned on, and shows red when standby.

3.3 Back View

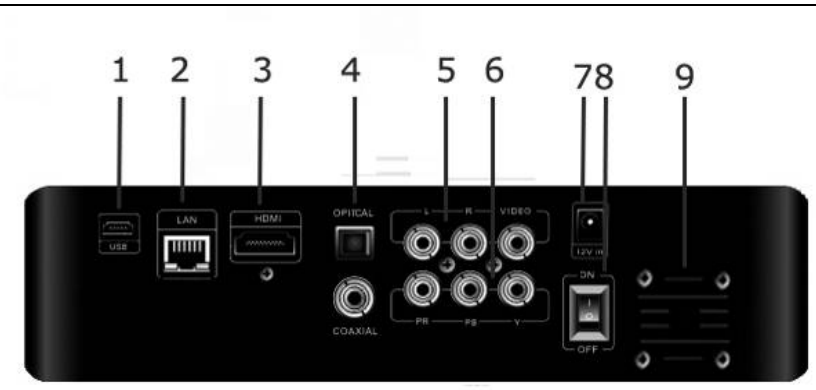

1. USB Device 2.LAN 3. HDMI 4. Coaxial/Optical Fiber
5.AV OUT 6. YPbPr Out 7.DC-IN 8.Power Switch 9. Cooling Fan

Interface Description:

No.	Interface	Operation instruction
1	USB Device	Connect to computer by this jack.

2	LAN	LAN: Connect to wire network by LAN jack
3	HDMI	Connecting to the video device and output HDMI audio and video signals by this jack.
4	Coaxial/ Optical Fiber	SPDIF Coaxial/Optical fiber output digital audio. (The SPDIF coaxial/optical cables are not including in attachment).
5	AV Out	Connect to audio and video device by this jack, and output CVBS signals.
6	YPbPr Out	Connect to audio and video device by this jack, and output PR/PB/Y video signals.
7	DC-IN	Power input: DC 12V.
8	Switch	Switch on/off the power.
9	Cooling Fan	Exhausting the heat from internal.

3.4 Side View

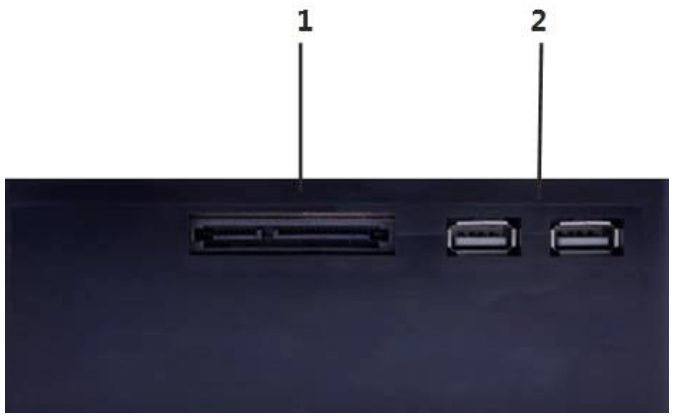

1.Extenal SATA Interface **2.USB Host ×2**

Interface Description:

No.	Interface	Operation instruction
1	External SATA Interface	Connect the external SATA HDD.
2	USB HOST × 2	Connecting external USB device by this jack.

3.5 Install HDD

3.5.1 Loosen the screws and open the top cover.

3.5.2. Install the HDD (Put the 3.5” HDD into the bottom cover and tight it by the screws).

3.5.3 Connect the player’s data cable and power cable to the HDD.

3.5.4 Install the bottom cover as following picture:

3.5.5 Lock the screws on the bottom of player.

Then install HDD installation is complete, as shown below:

4. Power On/Off

4.1 Power On

Connecting the power cable and Video cable and switches on, then press the stand by key on the remote controller or press the power key on the front panel of the player, power on the TV and select the input signal by the connecting way, the player will soon enter into the home menu.

4.2 Power Off

Press the power button on the front panel or press the standby key on the remote controller, the player will soon enter standby mode, and the power indicator will turn red. Then switch off to cut off the power supply then you can unplug the power cable.

5. Browse Function

5.1 Browsing Movie

Press the **Left/Right keys** on the remote controller to select **MOVIE** from the main menu above the screen;

Browsing Movie	**Instructions of Operations**
	Press the **Up/Down keys** to select the device to be previewed and press the **OK key** to access; Press **Up/Down keys** to select the folder or movie to be browsed and press the **Ok key** to the full screen plan state.
The following buttons can be used to control video playback:	
Play/Pause	Pause or restart to playback the file.
FF/FR	**FR:** 1.5X, 2X, 4X, 8X, 16X, 32X. **FF:** 1X, 1.5X, 2X, 4X, 8X, 16X, 32X. Press repeatedly to select the speed.
Step	Press to goes forward or backward by certain time.
Previous/Next	Press it during media file play for forward

	or backward for a file; Press it during IFO file play to select Previous /Next Chapter.
Number keys	Select the chapter when playing the file has the chapters.
Goto	Press it during video play to select a time period to be played back.
SLOW	Play video in slow motion.□slow ratio: 1X, 3/4X, 1/2X, 1/4X, 1/8X, 1/16X□Press repeatedly to select the speed.
Zoom	Zoom in the image. (Zoom ratio:1X, 2X, 3X,4X, 8X,)
Subtitle	Select and set the subtitle options.
Audio	Press to select an audio track.
Repeat	Set repeat options: Repeat title, Repeat all, repeat off.
A-B	Press to select a starting point, repress to select an end point, and playback the selection continuously.
Info	View the information of the file.
Mute	Turn on/off the sound.
Volume+/-	Add or decrease the volume.
Stop	Stop playback the file.

Helpful tips:
1.In case of messy codes displayed during playing some subtitle files, press **Subtitle** key to call out the Subtitle menu and modify the corresponding character set codes and it will display normally;
2. In case of no audio output during playing some movies, switch the **AUDIO** to other channels and if it still fails, please try to decode by power amplification; (Please refer to **2.5** connecting to a Digital Amplifier; and refer to **8. 1 Change the Voice Settings**)
3. All supported movie files will be displayed in this application.

5.2 Browsing Music

Press the **Left/Right keys** on the remote controller to select **MUSIC** from the main menu above the screen.

Browsing Music	Instructions of Operations

	Press the **Left/Right keys** on the remote controller to select **MUSIC** interface. Press **Up/Down keys** to select the device to be previewed and press **Ok key** to access; Press **Up/Down keys** to select the folder or music you want to preview and press **Ok key** to play state.
The following buttons can be used to control music playback.	
Play/Pause	Pause or restart to playback the file.
Repeat	Set the repeat mode when playing music file.(1,ALL,repeat off□
FR/FF	FR (1.5x,2X,4X,8X,16X,32X) FF (1x,1.5x,2X,4X,8X,16X,32X) Press repeatedly to select the speed.
Step	Press to goes forward or backward by certain time.
Previous/Next	Find music files by page.
Up/down key	Select the Previous/Next file on the preview interface.
Mute	Turn on/off the sound.
Volume+/-	Add or decrease the volume.
Stop	Stop playback the file.

Helpful tips: In this application, the player will display all supported music files.

5.3 Browsing Photos

Press the **Left/Right keys** on the remote controller to select **photo** from the main menu above the screen;

Browsing Photos	Instructions of Operations

	Press the **Left/Right keys** on the remote controller to select **photo** interface. Press **Up/Down keys** to select the device to be previewed and press **Ok key** to access; Press **Up/Down keys** to select the folder or music you want to preview and press **Ok key** to full screen plan state.
The following buttons can be used to control video playback.	
PREV/NEXT	View the previous or next picture.
Zoom	Zoom in the image. □Zoom ratio:2X,4X,8X,16X,fit□
Navigation key	Press the Left/ Right keys to revolving the previous pictures When enlarged the image, you can move around by navigation key.
Info	Hide or display the information bar during playback.
Pause	Pause playback.
Stop	Stop playback.

Helpful tips:
1. It will automatically start the slide mode when the picture is displayed in full screen;
2. You can also preview pictures when listening to your favorite music;
3. All supported picture files will be displayed in this application.

5.4 Browsing All

In this mode, all supported files and folders (only support for music, photos, and movies files) will be displayed.

5.5 Browse Files via Network

There are three ways to locate media files shared on your local network in the **Network** menu. One is to browse through **My_Shortcuts**; the other is to browse through **My_Neighbors**. And the third is browse through **workgroup**.

5.5.1 Browsing through My_Shortcuts

My Shortcuts: enter by inputting IP address, users' name and the password directly.
1. Share a file on computer and set access permissions for this folder, it needs read permissions at least.
2. Close the windows firewall.

My_Shortcuts	Instructions of Operations
	Press the **Up/Down keys** on the remote controller to select **My_Shortcuts** from the **network** menu and press **OK key** to access.
	Press the **EDIT** button and select **Add** option access.
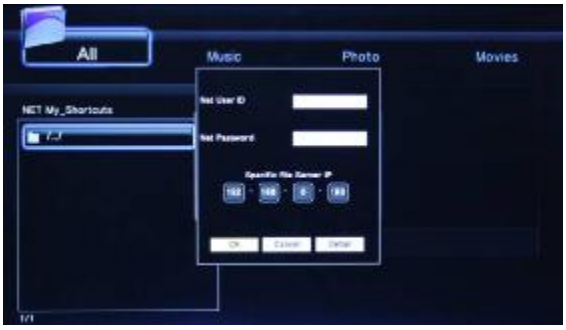	After the add item is selected, you will enter IP setting window. Press **OK key** to set the **Net User ID**, **Net Password**, and **Specific File Server IP**. click **Simple/ Detail** to switch between simple and advanced menu. And you can also input the IP adress in Specific File Server IP first,then input **Net User ID**, **Net Password**, and press **confirm** or **comfirm and save to myshortcuts** to access.

	Press **OK** key to select the dialog box**,** it will pop up a visual key board.Use the navigation key to input the characters for setting **Net User ID**, **Net Password**.
	If there is no Net User ID, Net Password for the shared pc, please input the IP adress in Specific File Server IP directly.
	Select detail to setting **Label**, **Net User ID**, **Net Password**, **Domai**n, **Host Name**, and **Specific File Server IP**. Click **Simple**/**Detail** to switch between simple and advanced options. Then you can select and play the shared media files on the destination computer.

You can also select "**modify**" to modify initial setting. Select "**delete**" for deletion and select return key to exit.

5.5.2 Browsing Through My_Neighbors

The system will automatically search the computer that has been installed with Transcode. If the computer is found, the player will display the computer name in the list for users' choice.

Transcode Server in PC

Transcode server is medial transition software. It need install in PC. And it is a communicate

bridge to connect Net Media Player and PC.

Install transcode Server

Double click the Transcode Server and finish the installation. Please execute the Transcode server as installation completed. And the icon will appear on right of the status bar. Click the icon or tap **Start**-**Program**-**Transcode Server** to enter the Transcode server interface.

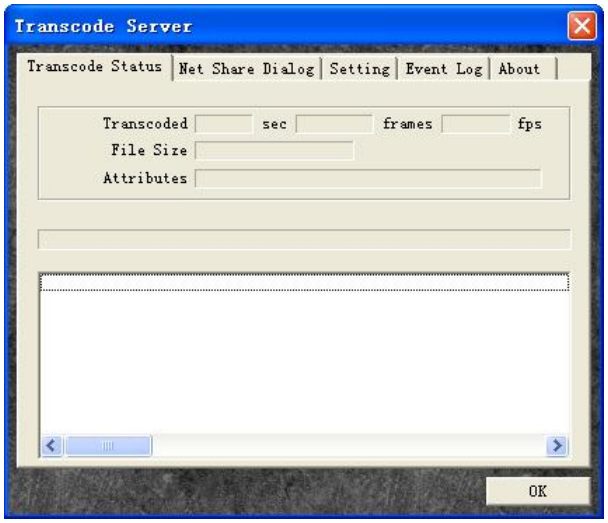

1 Transcode Status:

The **Transcode status** interface is used to display the status of Transcode Server.

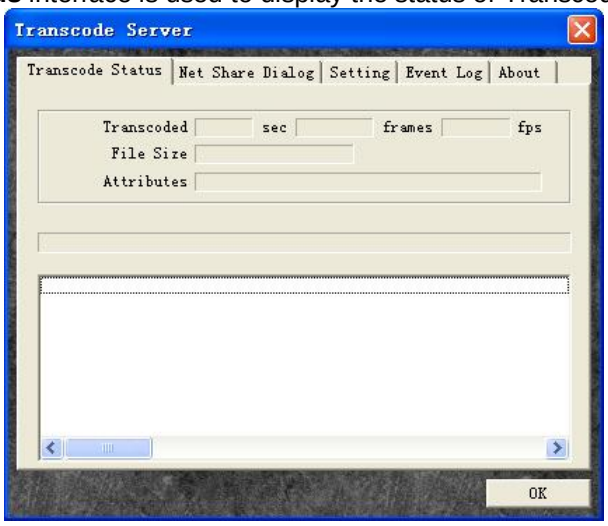

2 Net share dialog:

Click **Net share dialog** and select the shared folder on the local PC. Press "Add" to add the shared folder, press the "delete" to delete the selected folder.

The shared contents of the folder you can be browsed under the My_Neighbors.

Such as you add a folder named **test movie** on the local computer, you will browse the **test movie folder** under the My_Neighbors of the player's. And the shared folder will appear a shared symbol on local computer.

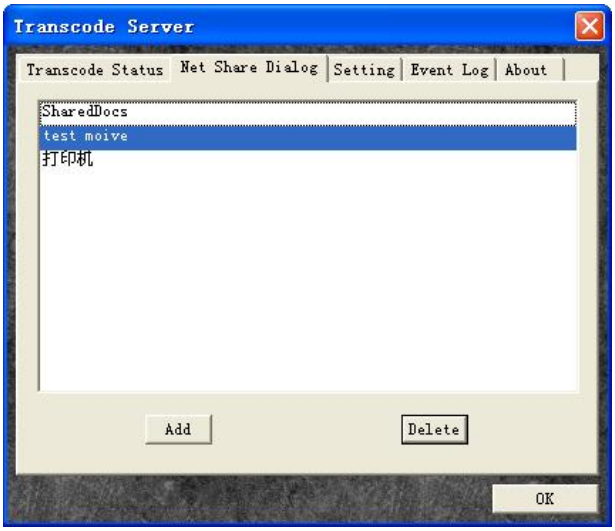

3□Setting:

In the **setting** interface, select **the Auto Run on system startup** option, click Apply to confirm, the software will running automatically when the computer boots up.

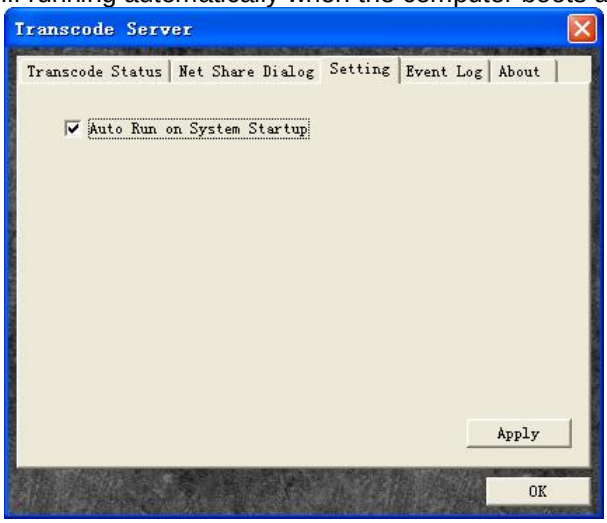

4□Event log:

In the **Event log** interface to display PC and Media player communication information.

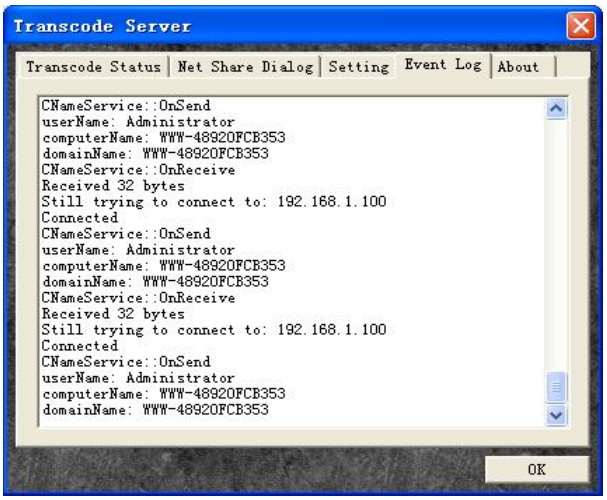

5□About:

In the **about** interface view the software's version information.

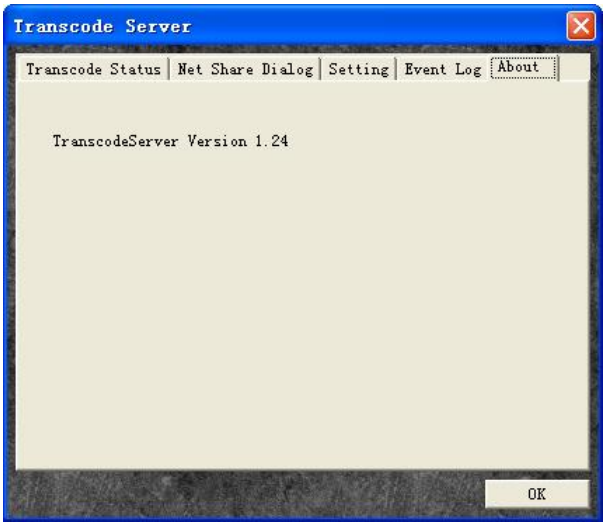

5.5.3 Browsing through WORKGROUP

The system will automatically search the network computer. If the computer is found, the player will display the computer name in the list for users' choice.

WORKGROUP	Instructions of Operations
	Press **Up/Down** keys on the remote controller to select the **workgroup** and press **OK key** to access. Press **Up/Down** keys to select the computer you want to access and select the media file to be played from the computer directory and press **OK key** to play.

Helpful tips:

The working group or computer will not be displayed in the list subject to the different network states sometimes. Then it's recommended that you can preview by My_Shortcuts.

5.6 Browsing from DVD

When you connect an external DVD ROM, the system will be finding the device automatically, then you can select DVD item in browser and find the file to play.

Set the Setup-System-R/RW auto-play as on, and then when the system detects the DVD-ROM, it will be playing backs the disc automatically.

5.7 Browsing UPNP files

Universal Plug and Play is a kind of system structure which is used for PC and equity common equity network connection of intellectual device (or instrument), and it is especially used in households.

UPNP that is installed in computer enables us to easily browse the files that are shared on the internet. When using UPNP for entrance, the situation that your computer has used UPNP service shall be confirmed. For a computer that is installed with Window xp system, what you have to do is to update the Window Media Play to the 11th version, and then the computer will get the UPNP agreement automatically.

After Window Media Play 11 has been installed, the steps of starting UPNP can be found in the following:

1).Start Window Media Play 11 and select library-> media sharing.

2). Select settings on this interface and Select Allow new devices and computer automatically (not recommended) item. The system will found the UPNP device on the network automatically.

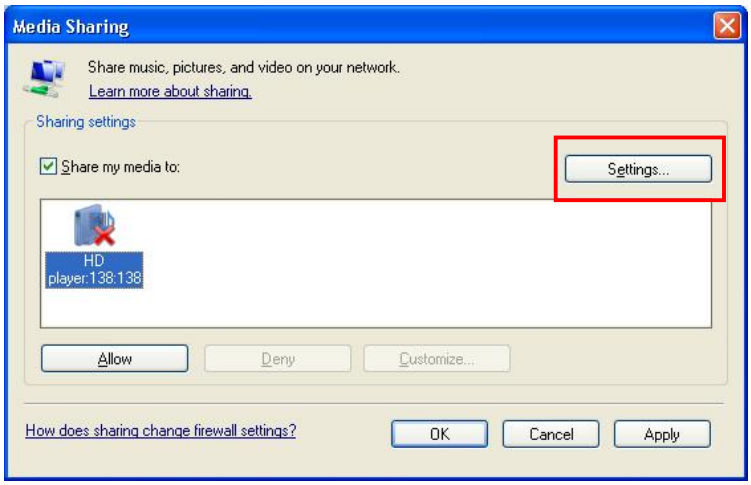

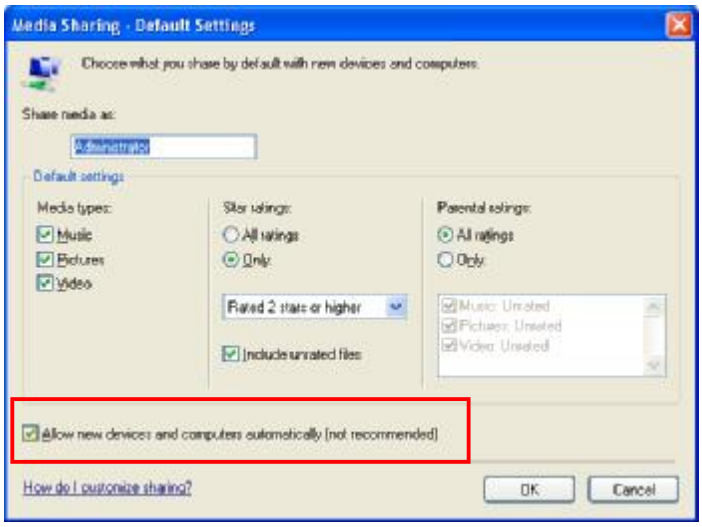

Select allow to making the device (the HD player) is customized.

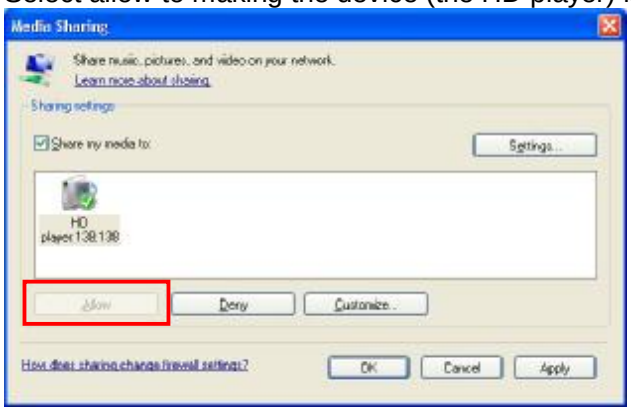

3). Select library->add to library.

4).On Add to library-Add to add the share files.

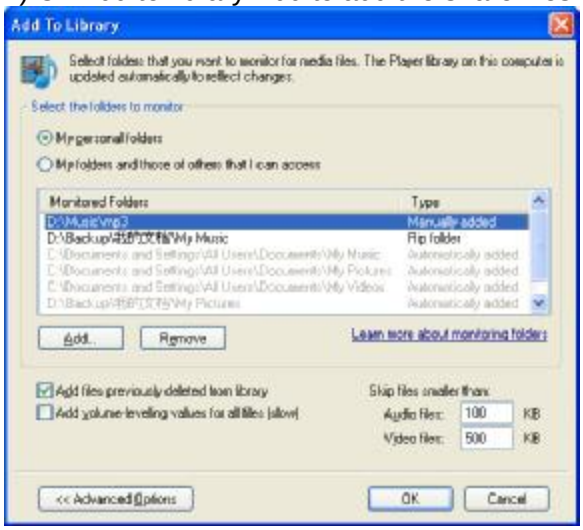

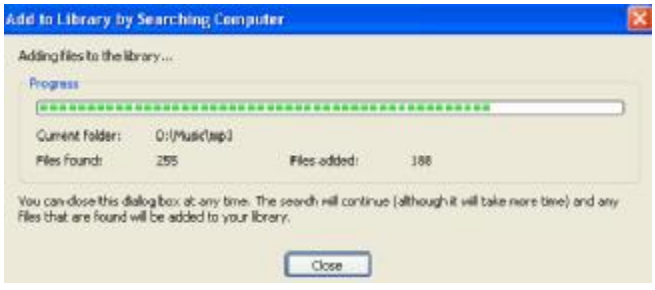
Add to Library by Searching Computer
Adding files to the library...
Progress
Current folder:
Files found:
255
Files added:
188
You can close this dialog box at any time. The search will continue (although it will take more time) and any files that are found will be added to your library.
Close

Then the UPNP server configures on computer is completed.
Note: you need to close the windows firewall, or you will not achieve the function of the media file sharing.

Then you can enter the system and select UPNP in Browser access.

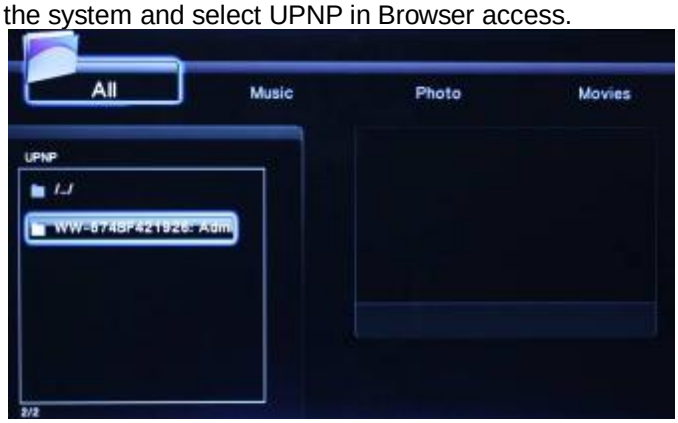

5.8 Play list

With Play List function, you can add your favorite media files into the list to play.

5.8.1 Add Music to the Play List

Add Music to the Play List	Instructions of Operations
	Select **HDD** in browser column for entrance. Then select **music** interface. Press the **Left/ Right keys** to select the file types of browser on the screen; Press **Up/ Down keys** to select the files to be added into the Play List; Press **SELECT key** to mark the files; Press **CONFIRM key** to add the marked files into the Play List.

After select background music in **Setup-MISC-background music** as playlist, when you are browsing the photo, it will play the background music as in playlist automatically; if you save the music and the photos in the same folder, and set the background music as the folder, when you browsing it will play the music in folder.

5.8.2 Delete file from the playlist

If you wish to delete a file from the playlist, press the **Select** key to select, and then press the **Confirm** key to confirm.

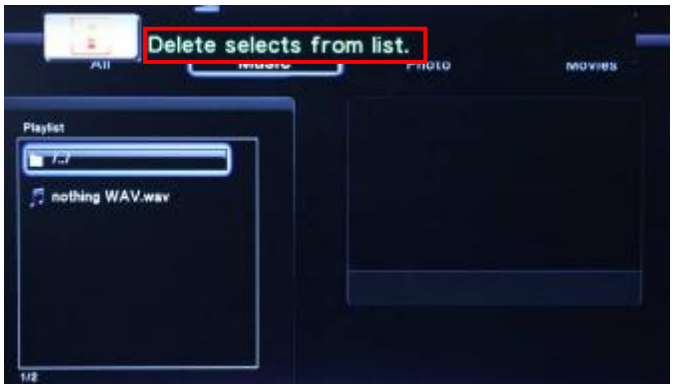

When you selected the files in playlist, then press **Return**, it will be prompt as “do you want to leave without save to playlist” and select **Confirm** or **Cancel** to set it.

Helpful tips:

1. To use the Play List, you must format you internal HDD in “setup” mode first.
2. Only add the media files on internal HDD, the files in USB and other external device are not allowed to add. If you need to add the files on external device, you should copy it in internal HDD.
3. Cannot add the folders.

6. Renaming/Deleting Files

When navigating in the browser menu, you can press the **Eidt** key to activate a popup menu where you can rename and delete files or folders.

Rename the files	Instructions of Operations
	Press the **UP/DOWN** keys to select the files which you want to rename. Press the **Edit** key and select **Rename** item.
	Use the navigation key to input, press **OK** to confirm.

Helpful tips:

The files in Play list will not be supported to rename. Because it is only as a link exists in internal HDD.

Delete the files	Instructions of Operations
	Press the **UP/DOWN** keys to select the files which you want to delete. Press the **Edit** keys to select **delete** item.

7. File Copy Menu

Select the File Copy item on the main menu or press the file key on the remote controller to enter into the File Copy menu, which allows you to copy files between Removable Devices (Card, USB), HDD, and Network ect.

Steps

Step 1: Select the source and destination device	Instructions of Operations
	Press **Up/Down keys** to select the source and targeted device from **Source File** and **destination File**. Press the **Right key** to execute the next step.
Step 2: Select the source files	

<table>
<tr><td>
</td><td>In the source device, select the files which you want to copy.
Press select key on the remote controller to select files.
Press the Left key to cancel and press the Right key to execute the next step.</td></tr>
<tr><td colspan="2">Step 3: Select the destination folder</td></tr>
<tr><td>
</td><td>Select the folder you want to save the copied file in the targeted device.

And you can also create a new folder to saved the copied files (select “New directory”, it will pop-up Virtual keyboard which you can use it to named the folder).

Press Up/ Down keys to select the folder, press the Right key to execute the next step.</td></tr>
<tr><td colspan="2">Step 4: Select Copy or Move to proceed</td></tr>
<tr><td> 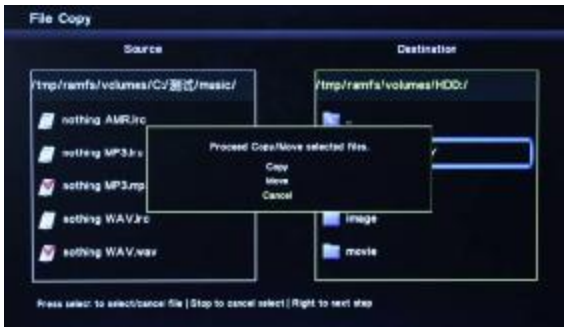
</td><td>Press Up/Down keys on the remote controller to select the corresponding operational functions and press OK key to confirm and start to copy file.</td></tr>
</table>

8. Setup Menu

The Setup menu allows you to personalize and configure the preferences for your player.

Select the **Setup** icon on the main menu or press the **Setup key** on the remote control to enter into the setup menu.

There are five Setup options, including **Audio**, **Video**, **Network**, **System**, and **MISC**.

8.1 Changing Audio Settings

Use this menu to configure audio settings.

Night Mode:

Choose between **Off** /**On**/**Comfort**. If the option is turned on, the audio output volume will be decreased to make you more comfortable.

HDMI Output:

Choose among **RAW**/**LPCM DUAL CH**/ **LPCM MULTI CH**

SPDIF Output:

Choose between **RAW/LPCM DUAL CH**. In raw mode, Dolby Digital, DTS, or MPEG sound can be bypassed to the HDMI TV or Digital amplifier.

8.2 Changing Video Settings

Use this menu to configure video settings.

Video Settings	Instructions of Operations
Aspect Ratio	**Pan Scan 4:3**: Display a wide picture on the entire screen and cuts off the redundant portions. Select when a standard 4:3 TV is connected. **Letter Box 4:3**: Display a wide picture with two black borders on the top and bottom of 4:3 screens. Select when a standard 4:3 TV is connected. **16:9**: Compress the image to convert the whole image. Select when a 16:9 TV is connected. **16:10**: Compress the image to convert the whole image. Select when a 16:10 TV is connected.
Zoom Out	Turn on this function can reduce the image display size.
Brightness	Adjust the level of brightness.
Contrast	Adjust the level of contrast.
Hue	Set the contrast of screen.
Saturation	Set the contrast of screen.
Digital Noise reduction	Select auto to reduce the noise on the display and enhance view quality.
Video system	Select to adjust video output resolution: HDMI Auto, **NTSC**, PAL, 480P, 576P, 720P 50HZ, 720P 60HZ,1080I 50HZ, 1080I 60HZ, 1080P 50HZ and 1080P 60HZ
1080P 24HZ	Turn on this function, Playback the film files as 1080P-24HZ format will be more smoothly.

8.3 Changing Network Settings

Use this menu to configure Ethernet, LAN (Wireless Local Area Network) and PPPoE settings.

8.3.1 Wire LAN Setup

Wire LAN Setup

a.DHCP

Select to obtain IP address automatically.

b. FIX IP (MANUAL)

Select to manually input the IP Address, Subnet Mask, Default Gateway, and DNS Server IP Address. In case of any questions about the settings, please go to the network administrator for help.

Use the **Navigation** and **Number keys** on the remote controller to input the IP address. Press **Ok key** to confirm.

8.3.2 Wireless Setup

Wireless Setup

1). Selecting a connection profile

This player can store up to three wireless network connections. Press **ENTER** to go to next step, press **RETURN** to cancel, and press **PLAY** to connect.

2). Get Connection Mode

Choose among **Infrastructure (AP)** and **Peer to Peer (Ad Hoc)**. Press **ENTER** to go to next step, and press **RETURN** to cancel.

The following detailed description of these three kinds of connection settings.

8.3.2.1 Infrastructure (AP)

Infrastructure mode is used to connect computers with wireless network adapters, also known as wireless clients, to an existing wired network with the help from wireless router or access point.

Step1: Get SSID Name

After connection way of AP is selected, press the enter key to enter and get SSID setting page.

The system will automatically search the surrounding available network resources. After a while, the system will list the found SSID in table for users' choice. Through this table, users can select the wireless base station they want.

If the wireless base station has encryption, the password shall be input in relevant dialog box. **NONE** means it is an open system network.

As a different way in WPA and WEP encryption, the Virtual keyboard for enter the password will show as different.

After set up ok, the system will display the set result in Test OK and Show Net info interface. The information of wireless base station is recorded here, such as SSID, safety mode, IP address, subnet mask and preinstall gateway. Press the enter key to complete the setting.

If obtained the IP address failed, please return and try it again.

8.3.2.2 Ad-Hoc Setup

Peer to Peer mode, which is also called Ad Hoc mode or computer-to-computer mode, is used to connect wireless clients directly together, without the need for a wireless router or access point.

Connect wireless network card with the system and carry out the following operations.

Step 1: Ad-Hoc Setup

After AD HOC way is selected, press the enter key to enter Ad-Hoc setting page.

Directly press Play key and the system will automatically carry out Ad-Hoc setting based on the default setting.

Related settings:

a. Wireless SSID (name of wireless)

Use the Virtual keyboard to input.

b. Wireless Security (select whether it is Open System or whether use WEP password to enter)

Use the Virtual keyboard to input.

c. Host IP

After the setting is finished, press Play key to enter system setting.

Step 2:

If the setting is successfully finished, the system will display the set result in Test OK and Show Net info interface. The information of Ad-Hoc is recorded here, such as SSID, safety mode, IP address, subnet mask and preinstall gateway. Press the enter key to complete the setting.

If obtained the IP address failed, please return and try it again.

8.3.2.3 WPS□AP□

Connect wireless network card with the system and carry out the following operations.

After WPS (AP) way is selected, press the enter key to enter setting page.

There are two connection ways: button setting (PBC) or individual information code (PIN code).

a. PBC (Push Button)

After PBC mode is selected, press the enter key for confirmation and the system will automatically get the IP.

If the setting is successfully finished, the system will display the set result in Test OK and Show Net info interface.

If obtained the IP address failed, please return and try it again.

b. PIN code

After PIN method is selected, press the enter key for confirmation and the system will automatically get the IP.

After the setting is successfully finished, return to network setting interface. The connection mode, IP address and signal intention will be displayed on the right side of the screen. (Note: AP means AP mode has correctly run; AD HOC means AD HOC mode has correctly run.)

Helpful tips:

The Wireless Network Card for USB is an optional and not all wireless Network cards sold on the market can be used for this player. It only support the model as Realtek RTL8187B and Realtek RTL8191SU, Please consult with the sales when you wish to make the best use of this product.

8.3.3 PPPoE Setup

Dial connection

Input the user ID and password in corresponding dialog box, then select the Wired interface or Wireless interface for dial-up connection.

Helpful tips:

When the wire/wireless/ PPPoE network are connected at the same time, and obtained the different IP address, on the front of the valid network there is a mark as□.

8.4 Change the System Settings

Use this menu to configure system settings.

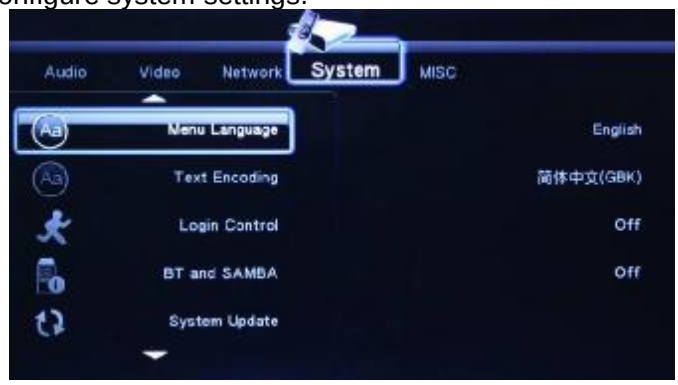

Menu Language	Select to choose the OSD (On-Screen Display) language. Include:English,TraditionalChinese,Espanol,Francais,Deutsch,Italiano, Dutch,Pyccknn, Simplified Chinese, Polski, Cesky, Magyar,Portugues. Press the Up/ Down keys to select the desired language.
Text Encoding	Select to set the text encoding option (subtitle display), Include: Unicode (UTF8), Simplified Chinese (GBK), Traditional Chinese (BIG5), Western, Turkish, Central European. Greek, Cyrillic, Hebrew, SE European, Wrong selection may cause the messy codes of subtitle displayed.

Login Control	Select to turn on/off the password protect for BT and SAMBA. **Default user ID:admin Default password:123** If you select off login control, you can go to the BT and SAMBA without input a password.
BT and SAMBA	Select to turn on/off the BT and SAMBA.
System Update	More detail update method please see the Chapter 11. And the system information is also displayed in this interface.
Time	System time setting. Use the navigation key and number keys to set.
Parental Control	Select whether to classify the grade of the movie or the setting of the grade. **Default password: 0000**
R/RW Auto-Play	Automatic play of DVD. Press up/down key to select and press the enter key for confirmation.
Angle Mark	During play back DVD files, you can select the different visual angles to watch DVD. Press the Up/ Down keys to set the switches.
HDD Format	Select to format the built-in HDD. After formatted the hard disk, the data saved on the hard disk will be lost; so please operate carefully. More detail please see the Chapter **8.4.1.**
Restore default	Select to restore factory defaults.

8.4.1 Format HDD

For users who wish to install a new SATA HDD into the player, please refer to the following procedures to format the hard disk on the player before usage.

Access into **Setup**->**System**->**HDD Format** menu

Step 1: Select **OK** on the **Warning** page, press **ok** to confirm.

Warning!!!
You are going to enter the hard disc format process. All data in this hard disc will be lost after this process.
Please read the user manual to get more information!!
OK
Cancel

Step 2: Select **Format**, press **ok**, and then hard disk format will start.

The formatting procedure will be finished within a few minutes. And then you can use the hard disk properly on the player.

After success format the HDD, then you can use you player normally.

Note: HDD format will remove all data stored on the hard disk drive. Please take care and backup your data in advance!

8.5 MISC

Use this menu to configure s MISC settings.

Resume play	Whether or not to continue to play from the point interrupted last time.
Slide show timing	Time to switch over to the next slide when the pictures are played in slide form (off, 2S, 5S, 10S, 30S, 1MIN, 2MIN□
Transition effect	Transitional effect for picture switch when the pictures are played in slide form(include: off, cross fade, left to right, top to bottom, waterfall, snake, dissolve, strip left down,all effect shuffle□.
Ken Burns	Animation effect for picture switch when the pictures are played in slide form.
Seamless playback	No middle pause when turn on this function during playback the Multi-segment DVD.
Background music	Set to play the music in the Play List or music file in the present folder as the background music.
Screen saver	Activate the screens saver function.
Movie preview	Select whether or not to preview the movies before playing it.
Play	Select the class of the files you wish to auto play. More detail sees the chapter 8.5.1 **Auto play the media files function**.

8.5.1 Auto play the media files function.

Only support for used in an external USB storage device.

1. Create three new folders as photo, music, video under the root of the external USB device, and create a photo.txt, music.txt and video.txt file in the corresponding file folder, Copy the files which you wish to automatically playback into the corresponding folder.

2. Through setup-MISC-play, select the class you wish to auto play.

3. After setting, connect the external USB to the player, and restart the player. Then the system will come into the directory automatically to playback the media files.

9. IMS

This is the third-party service and may be close off because of the policy issues.

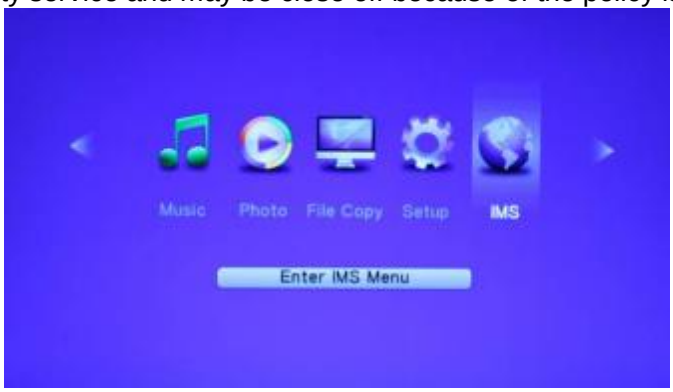

Press left/right key to selected, press ok key to access into IMS interface.

In IMS interface, you can go online to browse; there are Youku, search video, weather, Voole, and RSS News five items to browse.

10□BT and Samba

10.1 Web management and BT Download

To use this function, you need to format the Internal HD in Settings-> System-> Format menu;

10.1.1 Login on Web Management Page

Please make sure player is connected to the network, and get the IP address of the player under SETUP->NETWORK menu.

Tap the IP address (e.g.192.168.0.195) in the address bar of Internet Explore on your PC.

Then you can access the Web server on your PC.

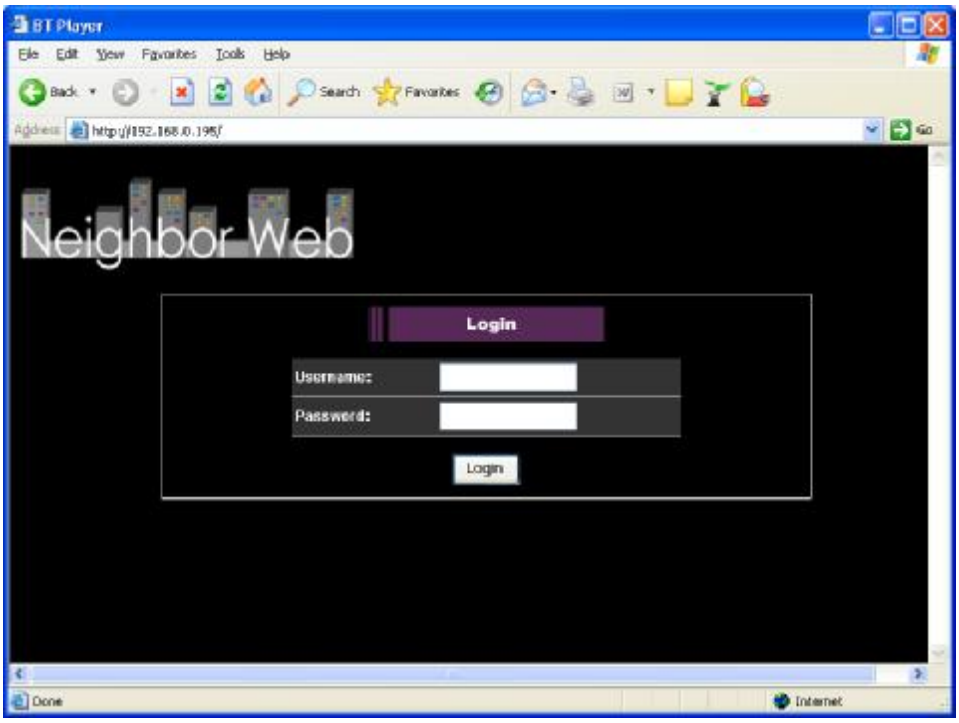

Note: if the settings -> System -> Login control is set to on, the password to take effect.

The default user name is' admin ', default password is '123'.

If the login control is off, it will not need to enter a password and come into the main interface directly, the main interface showing as follows:

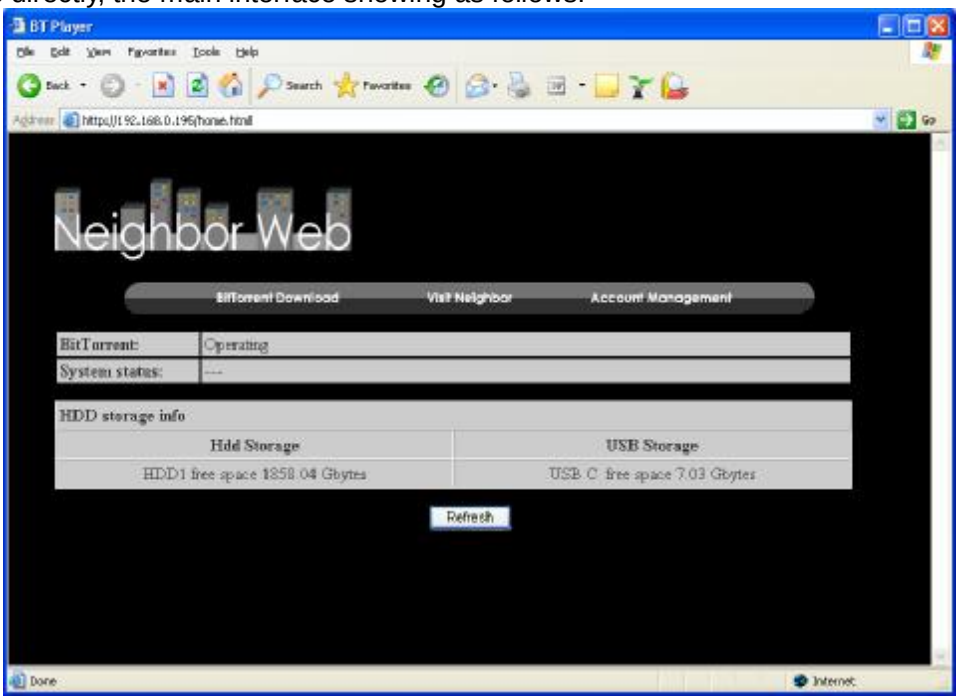

10.1.2 Account Management

At Home page, select “Account Management” into Account Management page.

If click “Account Management” is not into this page, please ok Login control is set to ON.

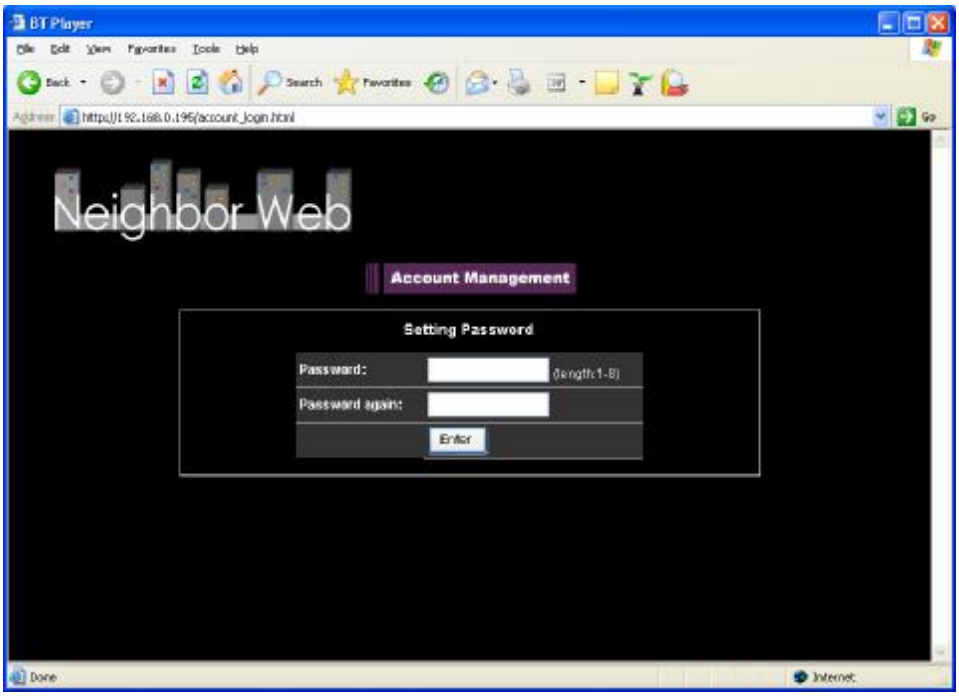

Login password can be modified at here. Please setting password according your favorite. Please input password twice and click “Enter” to confirm.

10.1.3 Visit Neighbor

Click Visit Neighbor on the home page of Neighbor Web.

All the devices are display here and you can click to visit.

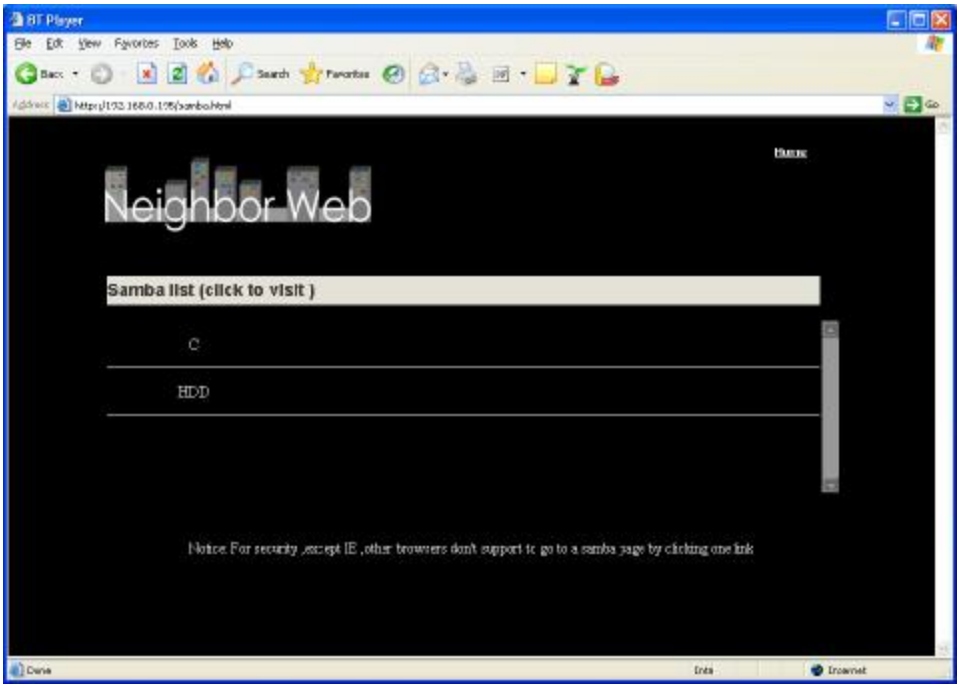
BT Player
Neighbor Web
Samba list (click to visit)
C
HDD
Notice: For security ,except IE ,other browsers don't support to go to a samba page by clicking one link
Done
Internet

10.1.4 BT Download

The BitTorrent client btpd is running in daemon (a process running in the background)

mode and you can manipulate the process via the Web server.

Click **BitTorrent Download** on the home page of Neighbor Web, then you will enter the BitTorrent Download page.

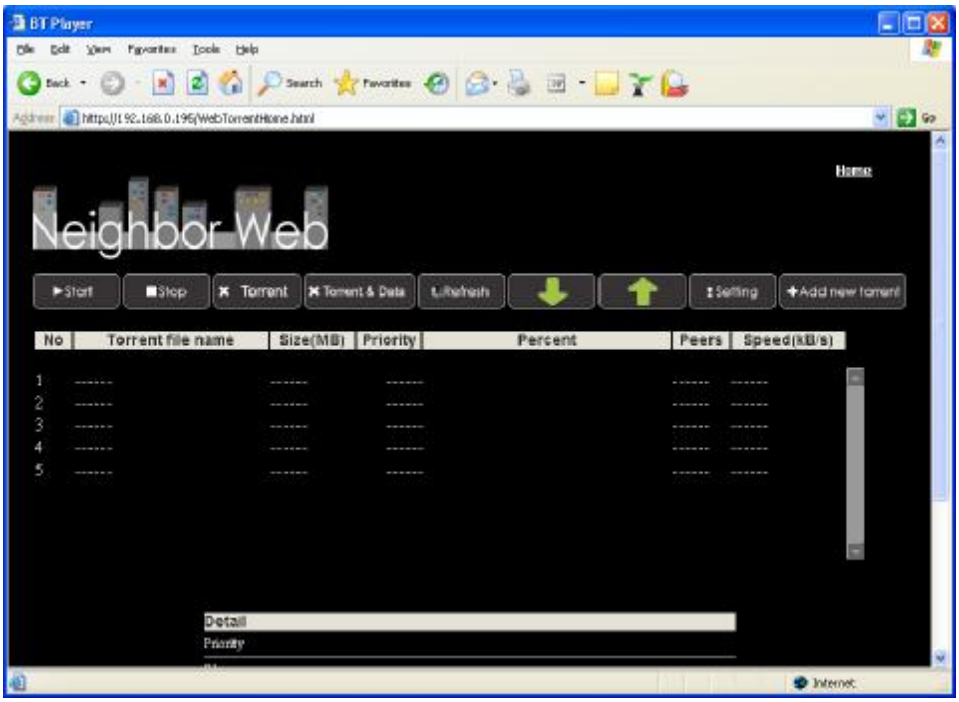

10.1.5 Add new torrent

Click **Add new torrent** on the BitTorrent Download page.

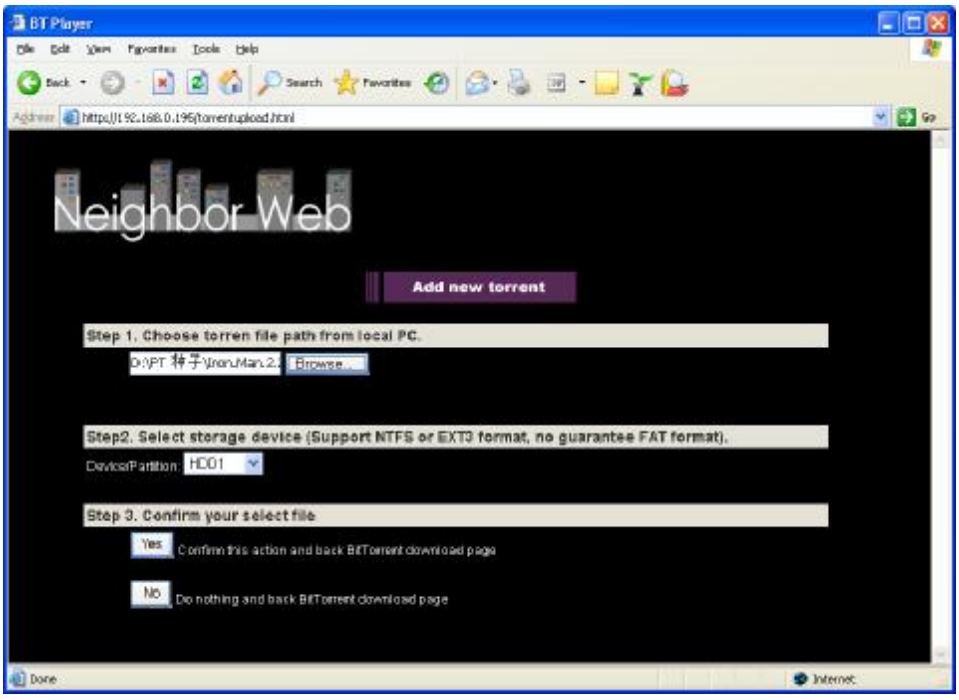
BT Player
Neighbor Web
Add new torrent
Step 1. Choose torren file path from local PC.
Browse...
Step2. Select storage device (Support NTFS or EXT3 format, no guarantee FAT format).
Device/Partition
HD01
Step 3. Confirm your select file
Yes
Confirm this action and back BitTorrent download page
No
Do nothing and back BitTorrent download page

Click **Browse** to upload a torrent file, and click **Yes** to confirm.

10.1.6 Managing the downloads

The BitTorrent Download page also allows you to start, stop, delete torrents, and set

priorities for torrents, as well as view the status of current torrents.

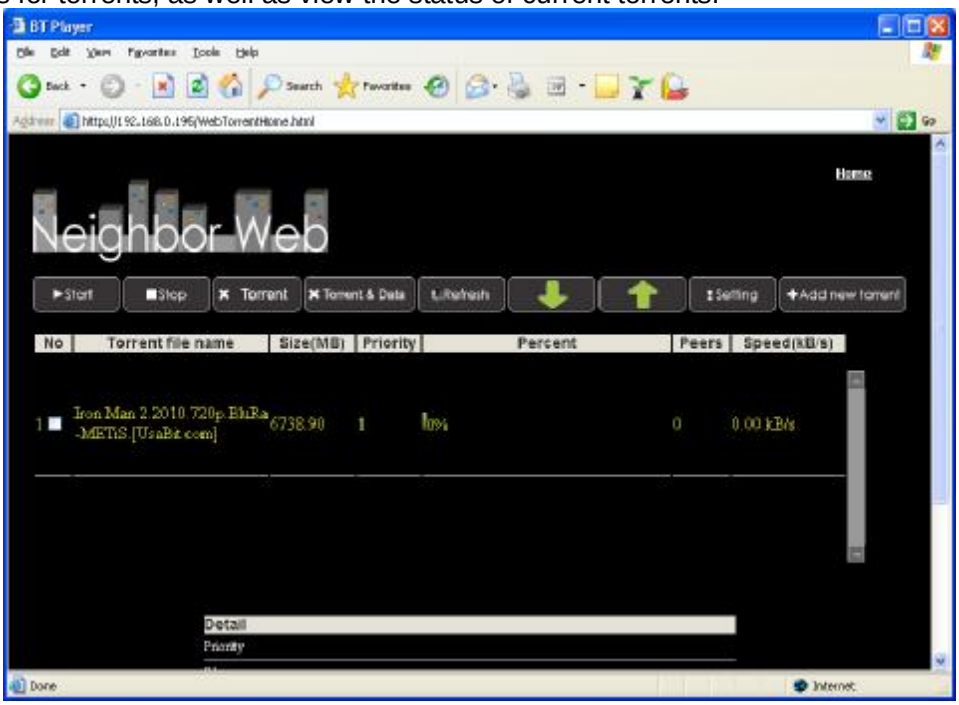

Click **Start** to begin download.
Click **Stop** to stop download.
Click **Delete** to delete the selected torrent.
Click **Refresh** to refresh the current status.
Click **Down** arrow to decrease the priority for the selected torrent.
Click **Up** arrow to increase the priority for the selected torrent.

10.1.7 Settings

Click **Setting** on the BitTorrent Download page to enter the BitTorrent Setting page.

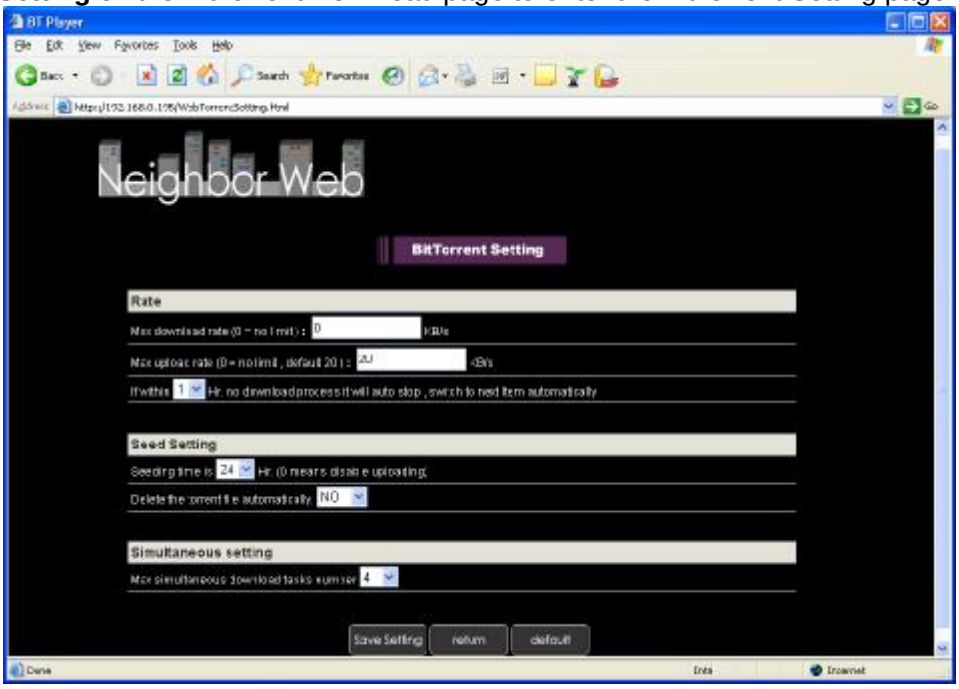

In the BitTorrent Setting page, you can configure the following settings:

Set the maximum download rate.

Set the maximum upload rate.

Set the idle hours to start the next download automatically.

Set the seeding hours.

Set to delete the finished torrent files automatically or not.

Set the maximum number of simultaneous download tasks.

10.2 Network Attached Storage

This product may serve as the network storage device (NAS, Network-Attached Storage). Put it into your family network to make it convenient for you to store and manage the data on LAN.

Before using this function, please make sure the network (Ethernet or wireless network) has been connected correctly. Input the \\IP address in the address column of **START UP**-> **RUNNING** or on the browser of Windows operating system and then press Enter key on the keypad to access the built-in hard disk on the player from the computer on LAN. E.g., input \\192.168.0.195 if the player's IP address is192.168.0.195.)

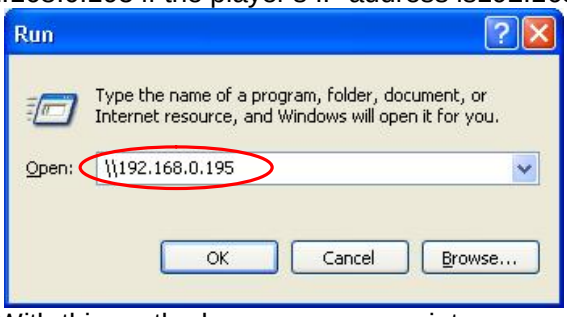

With this method, you can access into any partitions on the hard disk of the player, you can manage, copy or store the data in the player on LAN.

You can also access the player's Internal HD (samba) by the chapter **10.1.3** Visit Neighbor.

11. Upgrading Firmware

Firmware refers to the operating system (OS) on this product. Regularly upgrade the firmware to the updated functions.

11.1 Upgrading firmware in setup menu

Please download the firmware programs with updated versions from the official websites. And update firmware version as per the following steps:

Step 1: Prepare the external storage devices (such as SD card/removable HDD/U-disk ect. but only support FAT32 and FAT16 formats)

Please extract the downloaded firmware programs with the updated version to the root directory of external storage.

Step 2: Connect the external storage devices

Connect the prepared external storage devices onto the USB HOST port of the player.

Step 3: Enter into Software Upgrade menu

Enter into Setup-> System -> System Upgrade menu.

11.2 Upgrade method when the player unable enter into the main menu

Step1: Please extract the downloaded firmware programs with the updated version to the root directory of external storage devices. (Such as SD card/removable HDD/U-disk ect. but only support FAT32 and FAT16 formats)

Step 2: Connect the external storage devices onto the USB HOST port of the player.

Step 3: Unplug the power cable, hold down the standby button.

Step 4: Plug the power cable and approximately 5s loosen you hand which was pressed the stand by buttom.

After the operation has been confirmed, the system will be restarted and the System Upgrade interface will be displayed on the screen.

The whole installation will last for approximately 2 minutes; please wait for it patiently. The player will be restarted after installation. Then you can use all functions of this player normally and experience the unequalled multimedia enjoyment.

Remarks:

If installed error, unplug the power and re-installed;

Never disconnect the power supply during installation;

Never unplug the external storage devices during installation.

Different Model of player cannot use the same firmware, please upgrading it with serious cautious.

Please contact your dealer or choose to visit our website for the latest firmware.

Note:

View the current software version; please enter into the Setup-> System -> System Upgrade menu.

12. Others

12.1 Specifications

List of Supported ports:

- USB 2.0 HOST port x 2
- USB 2. 0 Slave port
- Composite (CVBS) A/V jack
- Component Y/Pb/Pr jack
- HDMI V1.3 interface
- Digital audio optical/ coaxial port
- 3-in-1 card reader
- 12V DC-IN

Multimedia formats supported:

i) AVI/MKV/TS/M2TS/MPG/MOV/VOB/ISO/IFO/DAT/WMV/RM/RMVB,surport for 720p/1080i/1080p
ii) MP3/OGG/WMA/WAV/AAC/FLAC
iii) HD JPEG/BMP, with unlimited resolution

Video codes supported:

iv) MPEG-1
v) HD MPEG-2
vi) HD MPEG-4 SP/ASP/AVC(H.264)
vii) WMV9(VC-1)
viii) Real Networks (RM/RMVB) 8/9/10, support for720p

Audio codes supported:

ix) MP2/3, OGG Vorbis, FLAC, WMA Standard (DRM, and Advanced Profile not supported), PCM, LPCM, AAC,RA

Subtitle formats supported:	
x) SRT, SMI, SSA,SUB, IDX+SUB	
Network Ethernet/ Wireless network	10/100Mbps Auto-Negotiation Ethernet IEEE 802.11b/g/n WLAN, at maximum 300Mbps (supported by optional WLAN USB Adapter)

Note: The Company has the right to changes the specifications of his products or designs without further notification.

12.2 FAQ

Question 1:

My computer can not find the product.

Answer:

(1) Make sure the unit is in on status.
(2) make sure that the unit is connected with the computer
(3) Connected the product to the back of computer USB jack.

Question 2:

When I try to disconnect the USB device, I keep on getting "The device 'Generic volume' cannot be stopped right now. Try stopping the device again later." message, what should I do?

Answer:

Close any program that might be accessing data on the player, including Windows® Explorer. If it does not work, close all programs and wait for another 20 seconds, then try the green arrow icon again. If it still does not work, you should shut down the player and disconnect the USB cable.

Question 3:

I find new file names and folder names that I never created before or they have strange gibberish names.

Answer:

Most likely, the player's file allocation table (FAT) has been corrupted. This might be due to the player shutting down (due to low battery power) while reading or writing to your computer by the USB connection. Windows and Macintosh often write extra files to the hard disk such as finder.def or System volume info. These are normal and will not do any harm to the player.

Question 4:

I used my player to transfer files back and forth between different computers. Will defragmenting the player hard disk do any harm to it?

Answer:

Defraygmenting the player hard disk may be useful after having transferred many files to and from the player. It is never harmful to use the defrayment on the player. Make sure no other programs are running while using the Windows® defrayment utility. Make sure you have connected the player with the external power adapter during this procedure.

Question 5:

My files have disappeared from the player.

Answer:

Make sure that you browse your files via the correct browser mode which means correct filtered views such as Photos, Music, or Movies.

Question 6:

Why do some support's form picture can't display in picture browser?

Answer:

E.g., the JPEG format include many different models, and our product does not support the gradual mode images, so you need for modify it to display it.

(1) Open the picture with Photoshop.

(2) Select "File" -> "Save As", select the image format is JPEG, input file name as following picture, then click "Save."

(3) when click "Save" it will pop-up dialog box as shown below; select "Baseline ('standard')" or "baseline optimized".

(4) Click "OK."

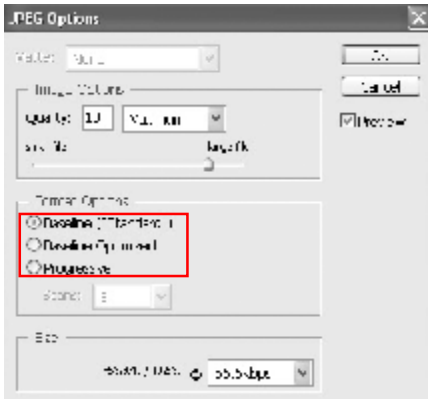

Question 7:

During power on, why does the TV will have a short flashing, blue screen or screensaver?

Answer:

This is normal, when the system initializes, it will setup the corresponding parameters so it can output the correct video signal to the TV, during the initializing time, the TV will receive incorrect signals or the signals will not be stable and will cause the TV screen to flash, some TV's will treat this as no signal, and will display a blue screen or screensaver.

Question 8:

Why when I switch to Y/Pb/Pr 480p, 576p, 720p, 1080i, and 1080p, does the TV screen display an unwatchable picture?

Answer:

Please check if your TV supports Y/Pb/Pr 480p, 576p, 720p, 1080i, and 1080p output, if your TV does not support, please use the A/V signal display instead, press the TV SYSYEM button on the remote control, then switch the TV's video input to NTSC or PAL.

Question 9:

Why is there no sound on movie or music playback when using Y/Pb/Pr component output?

Answer:

Y/Pb/Pr output is a video output only, and does not include sound signals. When using Y/Pb/Pr output, please plug the A/V OUT or the S/PDIF jack to output sound.

Question 10:

Why does my player can not recognize HDD?

Answer:

First make sure it is installed correctly, and do not delete any partitions on computer.

If there is a bad area of you HDD, you need to back up the data first and re-install the driver for the system.

Question 11:

Why the subtitles my added can not come out?

Answer:

First make sure the file name of the film and the subtitles are in same (Distinguish Capital /small letters), and saved in the same folder.

12.3 Copyrights and Trademarks

Copyrights

The Company reserves all patent, trademarks, copyright and other intellectual property rights, and the content of User manual can not be reprinted without permission. The software, music or movies owns the copyright are protected by the relevant laws, Users who use this player to copy of such content need to bear the related legal responsibility.

Trademarks

Manufactured under license under U.S. Patent #'s:5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS 2.0 + Digital Out are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

Declaration:

The copyright of this product is owned for the corresponding factory owner, and protect by the "Copyright Law", we sell the product are not means transfer or grant to the user any rights of the copyright.